

How to clean a RollerMouse Free3:

First, make sure the mouse is unplugged from the computer.

You will need a can of compressed air ("air duster") and some wet wipes.



Note!

The brand of air duster has no importance, as long as it is dry compressed air.

| Contour Design Nordic A/S

| Borupvang 5B, st.tv.
| 2750 Ballerup
| Denmark

| Phone: +45 70 27 02 27

| www.contourdesign.com
| support@contour-design.com

Use the air duster to clean away any dust/hair/lint particles under and around the rollerbar.
 Slide the roller left and right to access both sides of the bar with the compressed air.
 The sensor on the Free3 is indicated by the red ring in the image below.
 Press down on the bar to see the sensor and be sure to clean away any dust or particles on and around this area!

(Dust/hair/lint on the sensor might cause erratic cursor movement)



| Contour Design Nordic A/S

| Borupvang 5B, st.tv.
 | 2750 Ballerup
 | Denmark

| Phone: +45 70 27 02 27

| www.contourdesign.com
 | support@contour-design.com

If the bar feels stiff or hard to move right and left, cleaning the metal bar might help. Use a cotton swab with some rubbing alcohol on the metal bar at each end. Move the roller left and right to access as much of the metal bar on each end as possible. Use a clean cloth to dry it off again, to remove any sticky dust on the bar.



Finish off by cleaning the wrist rest and buttons with wet wipes, removing dust and grease on the surface of the RollerMouse.

Note!

Do not use strong alcohol or acid like acetone, as this might damage the material of the product.

You can now re-plug the USB into the computer and continue using your RollerMouse.

For further questions please contact us.

Customer Service
Contour Design Nordic A/S

| Contour Design Nordic A/S

| Borupvang 5B, st.tv.
| 2750 Ballerup
| Denmark

| Phone: +45 70 27 02 27

| www.contourdesign.com
| support@contour-design.com